



ATTENZIONE - ATTENTION - ACHTUNG

- Per lo smontaggio degli utensili utilizzare sempre la chiave di contrasto come indicato nel manuale d'uso.
- For disassembly of the tools use always the contrast key as mentioned in the user instructions.
- Fuer das Abmontieren der Werkzeuge immer den Gegenschlüssel benutzen wie in der Bedienungsanleitung erwaeht.

PER PORTAUTENSILI MODULARI MTSK-40 VEDI PAG. TBL300-1-40
 FOR MTSK-40 QUICK CHANGE TOOLHOLDERS CLAMPINGS SEE PAGE TBL300-1-40
 FUER MTSK-40 MODULARE WERKZEUGAUFNAHMEN SIEHE SEITE TBL300-1-40

Cod. MT	Mandrino Spindle Spindel	I (n1:n2)	RPM max n2	Coppia Max Max Torque Max Drehmoment M2 (Nm)	Reversibile 180° Reversible 180° umsetzbar	Lubrificazione int. Coolant through Innenkuehlung Pmax (bar)	Lubr.esterna Ext. coolant Aussenkuehlung	Lav. secco Dry-run Trocken Bearb.	B	CHIAVI NON INCLUDE Keys not included Schluesssel nicht einbegriffen	
OKU1650140	MTSK-40	1:1	6000	70	X	-	X	X	55	CHUB46	OKU0650004 ■
OKU1650240	MTSK-40	1:1	6000	70	X	100 (diag. 2)	X	X	63.5	CHUB46	OKU0650004 ■

- Chiave inclusa
- Key included
- Schluesssel inbegriffen

OKUMA

MOD: MULTUS U3000/4000/5000 2SW - GENOS L300MW /MYW

MODULO MOTORIZZATO ASSIALE MTSK H=90mm

Axial MTSK driven tool H=90mm

Axial MTSK angetriebenes Werkzeug H=90mm

Subject to change without notice.

M.T. srl

Via Casino Albini 480
 Tel. 0541/956034-957884
 Fax 0541/956341
 47842 S. GIOVANNI IN M. (RN)
 e-mail: mtma@mtmarchetti.com
 http://www.mtmarchetti.com



OKU150-4-20-K